

Universal Couplings.....	180 - 189	Bent Stem Swivels.....	227
Air King®.....	180 - 181	D.O.T. Air Brake	228 - 239
Global Air King.....	182 - 183	D.O.T. push-in fittings	228 - 229
Air King with ferrule.....	184	Legris D.O.T. push-in fittings.....	230 - 233
Air King with gauge port	184	Air brake.....	234 - 239
Air King universal swivels.....	184		
Global Air King ferrules	185		
Air King clamps	185	Push-in.....	240 - 258
Air King accessories	186	Brass.....	240 - 243
Sand Blast	187	Stainless steel Legris.....	244 - 245
Sure-Lock®	188 - 189	Nickel-plated brass Legris	246 - 247
Quick Disconnects.....	190 - 225	Nylon / Nickel-plated brass Legris	248 - 250, 252
Dix-Lock® N-Series	190 - 193	Nylon Legris.....	251
Dual-Lock P-Series	194 - 196	Manifold, Legris.....	252
DF-series.....	197 - 201	Fittings kit, Legris.....	252
J-series	202 - 203	Valves	253 - 255
M-series	204 - 205	Ball	253
CJ-series	206	Quick exhaust.....	253
SHD-series	207 - 208	Flow control.....	253 - 254
L-series	208	Check	255
U-series.....	209	Metric.....	256 - 258
NK-series.....	210		
BR-series.....	211		
A-series.....	212 - 213		
Profile Chart.....	214		
Ball swivel plug.....	214		
Air Chief industrial.....	215 - 218		
Air Chief plugs	215 - 216		
Air Chief semi-automatic	217		
Air Chief automatic	218		
Parker E-z-mate	219		
Legris automatic safety couplers	220		
Air Chief automotive	221 - 222		
Air Chief ARO interchange	223 - 224		
Air Chief Lincoln interchange	225		
Steel 3500 nipples.....	226		

! WARNING

The constant vibration created by air tools, like air drills and pavement breakers, is destructive to air hose couplings, especially the quick-acting type. To provide protection against coupling breakage and related hazards, Dixon® recommends the use of a whip hose. To construct a whip hose, connect one end of a short (3' to 10') air hose to the air tool using a 3500 type steel nipple. Connect the other end of the hose to the air supply using the standard quick-acting coupling. The heat-treated 3500 nipple will withstand vibration far better than the standard coupling and provide a safer connection. The whip hose should remain permanently connected to the tool.