# Installation Instructions For TRAILER IDENTIFICATION MODULE (TIModule)

# Part Number

## FT470



## For Sales & Service Contact

#### USA:

#### **Dixon Bayco USA**

Chestertown, Maryland Phone: 410-778-2000 Fax: 410-778-4702 Toll Free: 800-355-1991 E-mail: dixonbayco@dixonvalve.com www.dixonbayco.com

#### Mexico:

Dixva, S. de R.L. de C.V. Monterrey, N.L Phone: 01-800-00-DIXON (34966) Fax: 01-81-8354-8197 E-mail: contactenos@dixonvalve.com.mx www.dixonvalve.com

#### Asia Pacific:

Dixon (Asia Pacific) Pty Ltd Wingfield, South Australia Phone: +61 8 8202 6000 Fax: +61 8 8202 6099 *E-mail:* enquiries@dixonvalve.com.au www.dixonvalve.com.au

#### Canada:

Dixon Group Canada Limited Innisfil (Barrie), Ontario Phone: 705-436-1125 Fax: 705-436-6251 Toll Free: 877-963-4966 E-mail: isales@dixongroupcanada.com www.dixongroupcanada.com

#### Europe:

Dixon Group Europe Ltd Preston, England Phone: +44 (0)1772 323529 Fax: +44 (0)1772 314664 E-mail: enquiries@dixoneurope.co.uk www.dixoneurope.co.uk



The Right Connection™

### <u>Overview</u>

The FT470 TIModule is intended to be installed onto petroleum carrying tank trailers. Once installed, the unit will provide a digital serial number to uniquely identify the trailer. The serial number may be used to cross reference inspection dates, trailer owner, and trailer contents.

Technical specifications	
Dimensions	1.75"x1.50"x0.75"
(without tab)	
Operational	-40C to 60C
Temperature	

#### Mounting Instructions

All TIModules must be mounted inside a socket housing. The Mounting tab is raised to be compatible with housings featuring a built in standoff. If the TIModule is to be mounted in a housing that has no built in standoff, the necessary spacer is provided.

- 1. Clean the area surrounding the mounting bolt inside the socket.
- 2. Follow mounting diagram in figure 1 for a multi-socket housing or follow mounting diagram in figure 2 for a single-socket housing, then tighten mounting bolt securely.





### Wiring Instructions

Follow wiring diagram in figure 3 for multi socket housing or follow wiring diagram in figure 4 for single socket housing. Maintenance and installation to be completed in non-hazardous location.

- 3. Cut wires to length then connect to sockets using butt splice or included self locking spades.
- 4. Test that the TIModule is properly installed and functioning using either a FT530 or FT555 tester. One of these testers is required in order to digitally read and verify the TIModule is properly installed and readable.



5 - PROVIDED SPACER

Figure 3: Multi Socket

Figure 4: Single Socket

5. The electronic serial number must be provided to the loading rack in order to permit authorized loading of the host trailer.

#### **Dixon Warranty:**

For warranty Information, please refer to the inside back cover of the latest Dixon catalogue.