

BREAKTIME™

BREAKTIME

AB34	3/4"	☐
AB1	1"	☐
AB14	1 1/4"	☐
AB15	1 1/2"	☐
AB2	2"	☐

BREAKTIME W/HOSE


ABH3434	☐
ABH11	☐
ABH1414	☐
ABH1515	☐
ABH22	☐

REPAIR KIT

BA34K	☐
BA1K	☐
BA14K	☐
BA15K	☐
BA2K	☐

THE ASSEMBLY PROCEDURE IS AS FOLLOWS:

1. Inspect both parts thoroughly for damage (from striking pavement, etc.)
Replace unit if damaged. If not; proceed.
2. Remove "O" ring seals from valve portion and discard along with the cover band and spacer.
3. Clean both the valve and body of breakaway. Lubricate the "O" rings (#1) and install on the valve as illustrated.
4. Slide cover band retainer ring (#5) onto the body (past the groove) to the stop.
5. Install the cover band (#2) onto the body and slide it up against the retainer ring.
6. Install the spacer ring (#3) into the body.
7. Insert the valve into the body and press the two parts together.
(check the guide pin for alignment)
8. Install the brass rings (#4) pressing them firmly in place.
9. Slide cover band (#2) over brass rings.
10. Slide retainer ring (#5) toward the cover band and snap into the groove.
Inspect to make certain it is securely in the groove.

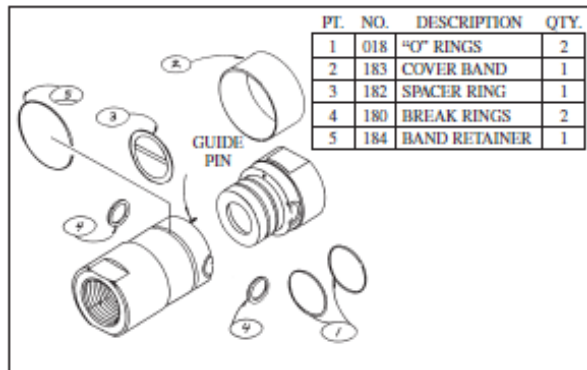

LISTED DISPENSING
DEVICE ACCESSORY
MODEL AB34-38N9

